

TANDBERG DATA

Securing your Information



StorageLibrary T40+ Series

Pass-Thru Installation Manual

P/N: 433831 rev. 5
2009-03-05

www.tandbergdata.com

StorageLibrary T40+ Series Installation

The purpose of these instructions is to help you mount the StorageLibrary T40+ Series / Pass-Thru system correctly into a rack, using the special rack assemblies included with the unit(s). Follow the same mounting instructions and drawings when increasing the number of units from 2 to 3, or 3 to 4, and so on. The correct vertical distance in the rack, between pairs of units, is obtained by using a special rack installation stencil. This stencil allows the rail mounting screws to only pass thru its punched holes.

Steps 1 to 4 are identical for both the stand-alone and the Pass-Thru option. For the steps explaining the preparation of the unit(s) (steps 4-14), the text description will differ between the stand-alone option and the Pass-Thru option.

STEP A: RAIL MOUNTING INTO A RACK

- 1) Position the rack installation stencils on the rack in 4 places as shown in figs. 1 & 3. The two rear stencils are optional. The stencils must be positioned on the rack at the same vertical distance from the bottom of the rack.
(NOTE: The holes in a standard rack are NOT evenly distributed. Make sure that the holes in the stencil fully match the hole-set, see fig. 2. Also make sure that the stencil is placed with the single hole downwards, and the double hole upwards).
The holes and the text on the stencil ensure the correct vertical position for the rails of one pair of units. If the system contains more than 2 units, repeat the stencil attachment with the appropriate number of stencils, see fig. 4.
- 2) If necessary, adjust the Left and Right rail set according to the length of the Rack to be used. See illustration of the rail set in fig. 5.
Rack size \leq 800 mm: Always use the hole-set close to the rear of the adjustable / sliding part of the rail assembly. The second hole-set to be used should be 100mm from the rear hole-set.
Rack size $>$ 800 mm: Use the hole-set closest to the rear of the stationary part of the rail assembly. The distance between this hole-set and the next one to be used should be 100 mm. This will ensure optimum rail stiffness. See fig. 5.
- 3) Mount the rails on the Rack by attaching the rails with the screws thru the marked holes on the stencil (see figs. 6, 7 & 8).
NOTE: Follow the numbered screw-mounting sequence in fig. 6 and use the eight M6x12mm countersink screws for this operation (for each set of rails).
- 4) Repeat this Rail Mounting Sequence for all units.

STEP B: PREPARING THE UNIT(S) TO BE MOUNTED:

- 5) **Pass-Thru Option:** (NOTE: Skip this step if you are using the **stand-alone option**.) Remove the appropriate blanking plates on the two units as shown in Figs. 9 and 10. The holes are normally blinded, and by removing the blanking plate the unit will have a physical hole in the top plate or the bottom plate, or both top & bottom plates. If the unit is the lower-most (**Master Library**) in the new combined structure, only the top plate is removed (see fig. 9). If the unit is the upper-most (**Add-On Library**) in the new combined structure, only the bottom plate is removed (see fig. 10). If the unit is in-between two other units, both top and bottom plates are removed.



Caution

Make sure you do not remove any blanking plates when you install a stand-alone system.



Caution

Remove only the upper blanking plate of the lower-most unit (Master Library), the top blanking plate of the upper-most unit (Add-On Library) of the combined system. For units in-between the upper and lower-most unit, remove both blanking plates. Make sure you do not remove any other blanking plates.

STEP C: MOUNTING THE UNIT(S) INTO THE RACK

- 6) Slide the unit(s) onto the rails, leaving a space of approximately 100mm for later ear rack mounting (step 11). See fig. 11.
- 7) Connect the power cable(s) to the unit(s). If using the redundant power supply option connect both power inlets on the unit(s). Otherwise connect one of the power outlets on the unit(s). Switch on the corresponding power switch on the unit(s).
- 8) The library detects that the transport locking screws are present. Follow the instructions on the front panel display to remove all the magazines and obtain access to the locking screws.



Caution

Be careful not to drop any of the transport locking screws inside the unit.

- 9) Remove the four transport locking screws on each unit as shown in fig. 12. If necessary, see *StorageLibrary T40+ Series Installation and User Guide* for a detailed description.
- 10) Mount the Ears on the sides of each unit. Use the eight M3x4mm countersink screws included with each unit. See fig. 13 and *StorageLibrary T40+ Series Installation and User Guide* for further details.
- 11) Slide the unit(s) fully into the rack and fasten them by mounting the ears to the rack using the two M6x12mm pan-head screws per unit (see fig. 14).
NOTE: mount the screw on the left side before the right side in order to give the correct sideways orientation of the unit.
- 12) Connect the unit's Ethernet cable.
- 13) Connect Drive cables according to the *StorageLibrary T40+ Series Installation and User Guide*.
- 14) Follow the Setup Wizard in the display for setting up the system. You may re-configure the library at a later stage if necessary. Please refer to *StorageLibrary T40+ Series Installation and User Guide* for more information.
- 15) **Pass-Thru Option:** Put the Pass-Thru box into the Pass-Thru magazine (see figs. 15, 16 & 17). Exchange the original T40 LOWER RIGHT MAGAZINE with the PASS-THRU MAGAZINE (with the Pass-Thru box inserted) and slide it into the **LOWER UNIT'S** right lower magazine opening. Re-insert the three other magazines. **Repeat for all units except the upper unit. Re-insert all the original magazines on the upper unit.** The system will now run the inventory sequence and perform calibration of the unit(s).

Stand-alone Option: Re-insert all four magazines as-is.

The system will now run the inventory sequence and perform calibration of the unit(s).

The system is now ready for use.

Figure 1. Position of the Rack Installation Stencil (Front View).

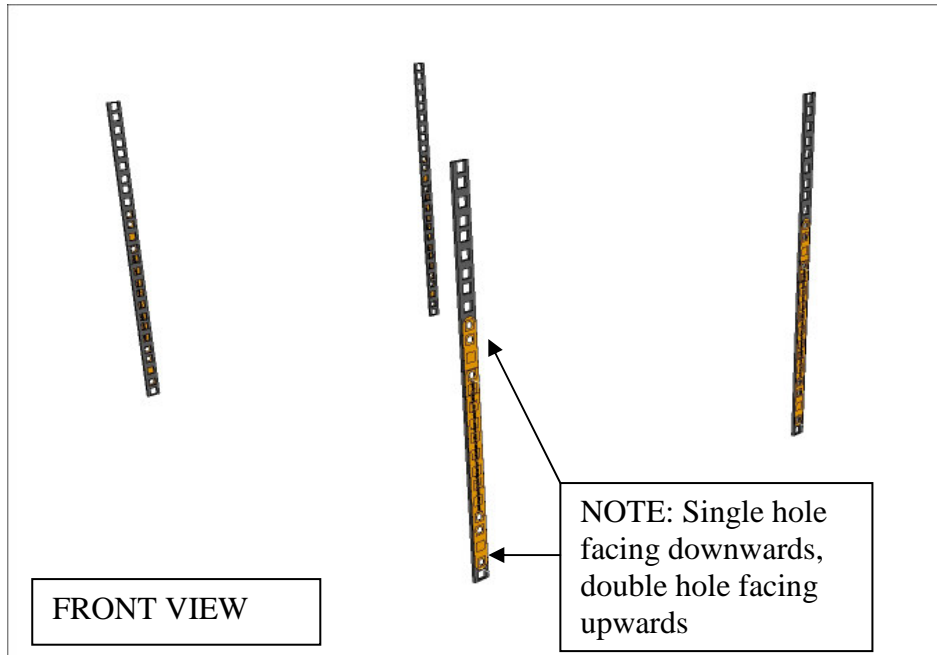


Figure 2. Matching the Hole-set.

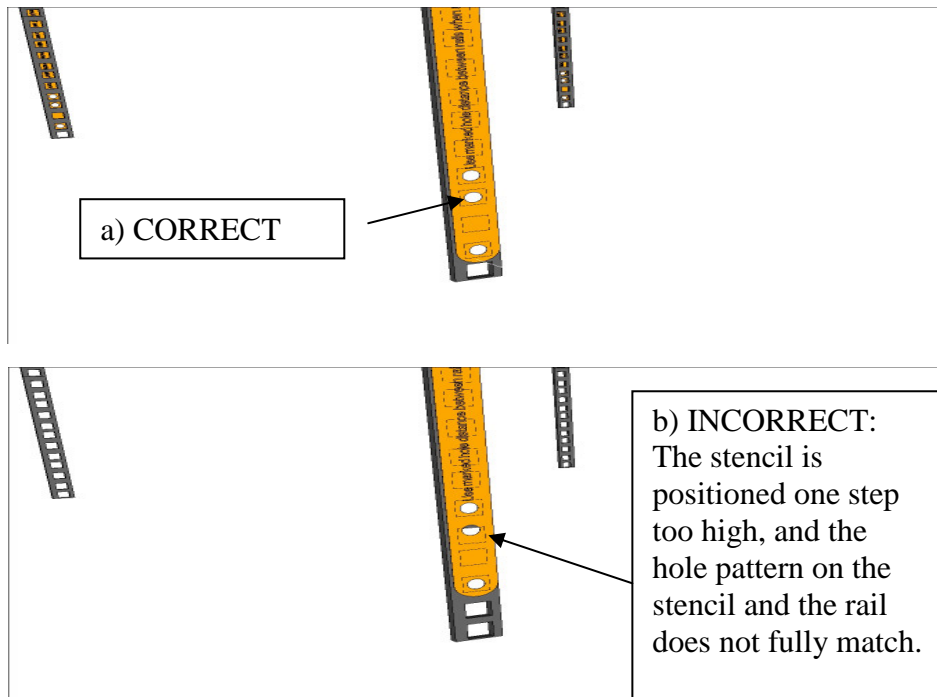


Figure 3. Position of the Rack Installation Stencil (Rear View).

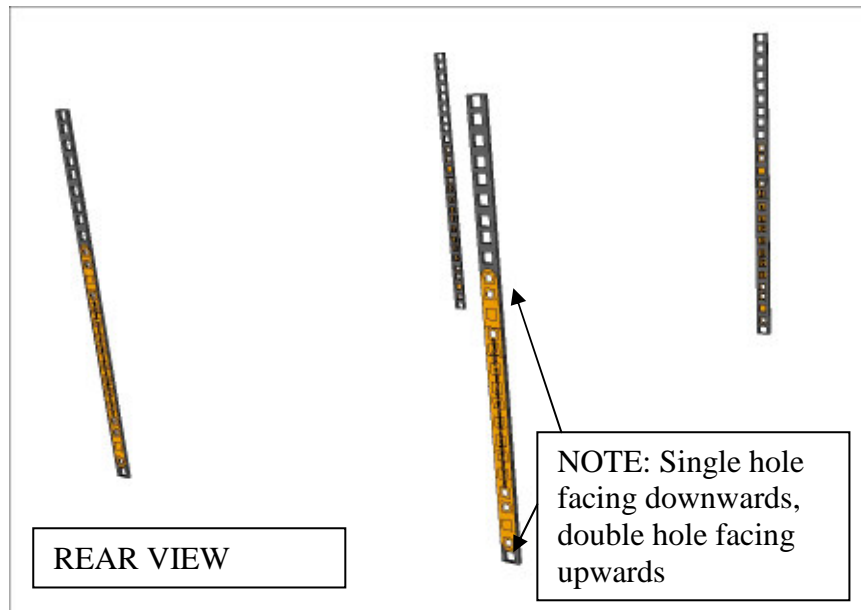


Figure 4. Aligning of the Rack Installation Stencils for systems with more than two units.



Figure 5. The Rail Assemblies.

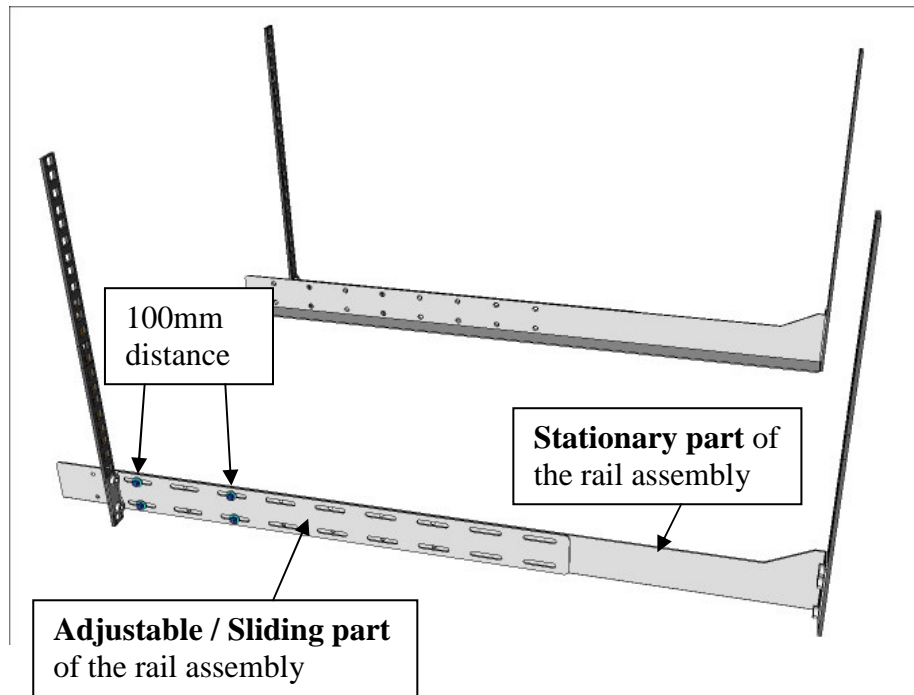


Figure 6. Screw Mounting Sequence (Front View).

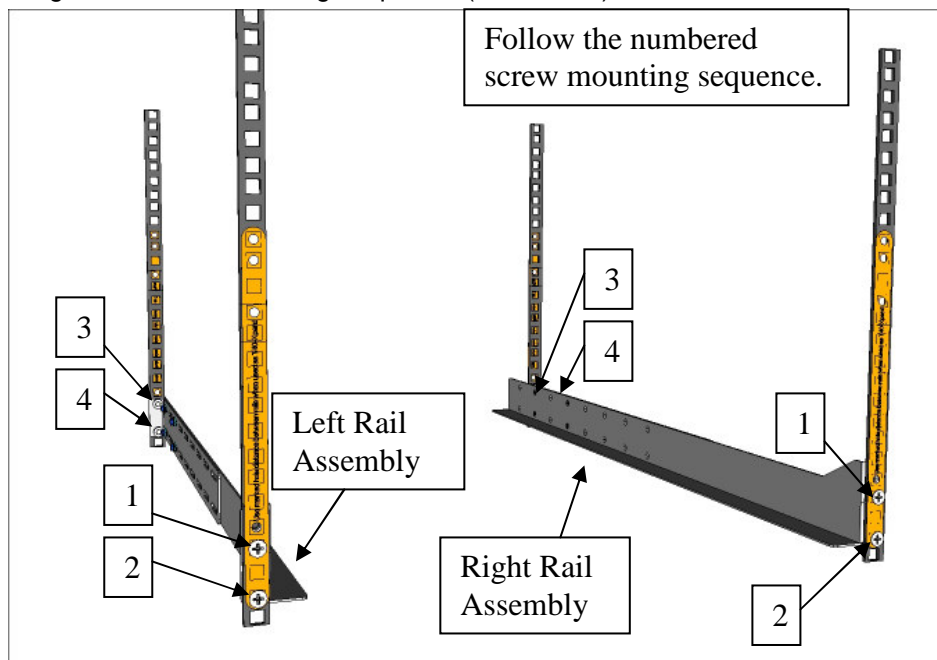


Figure 7. Rear View of the Rack.



 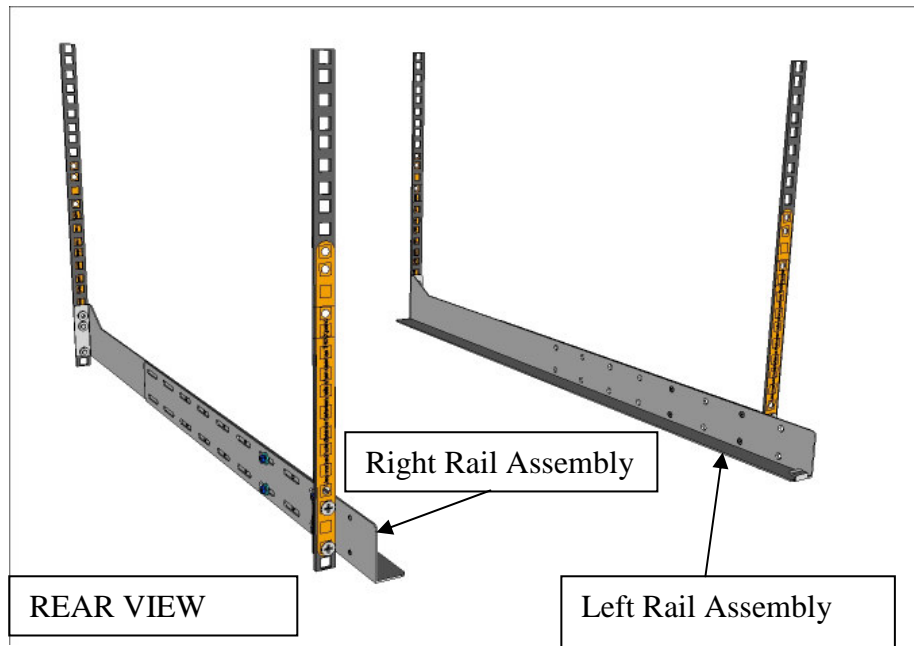


Figure 8. Rack-Ear Mounting Holes.

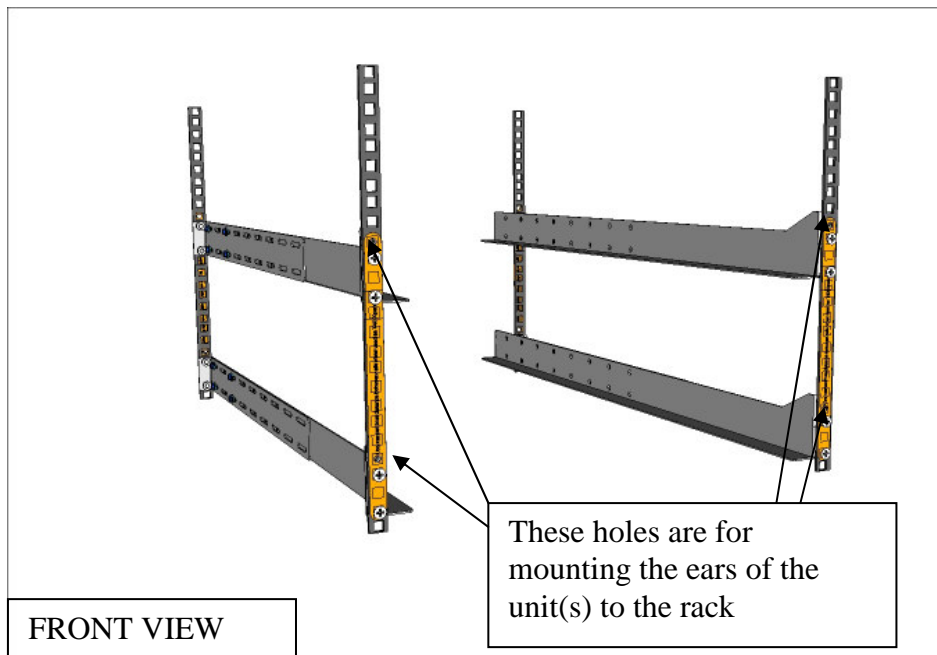



Caution

Remove only the upper blanking plate of the lower-most unit (Master Library), the top blanking plate of the upper-most unit (Add-On Library) of the combined system. For units in-between the upper and lower-most unit, remove both blanking plates. Make sure you do not remove any other blanking plates.

Figure 9. Remove the top blanking plate of the lower-most unit.


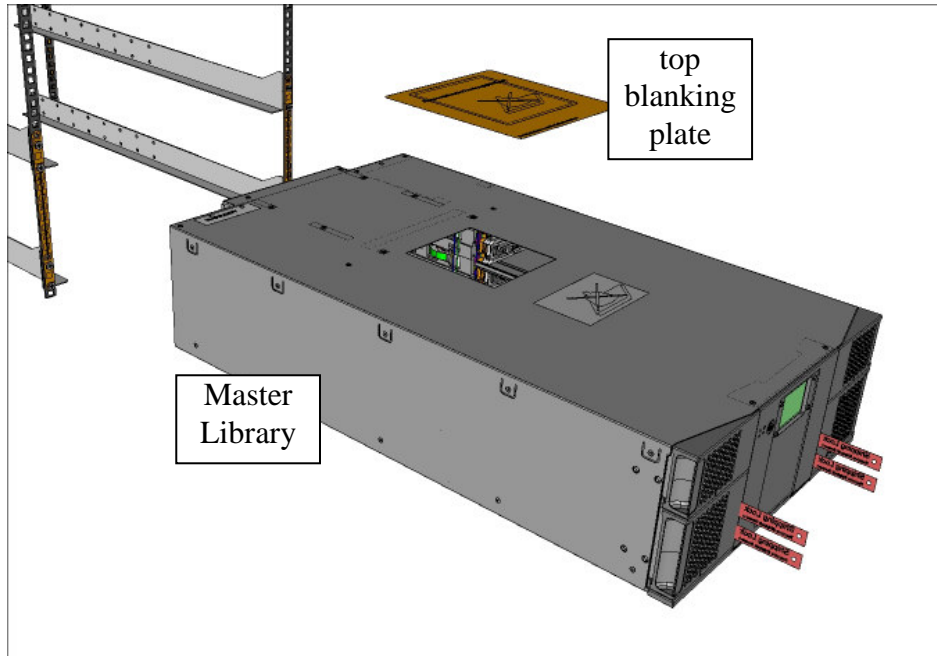


Figure 10. Remove the bottom blanking plate of the upper-most unit.

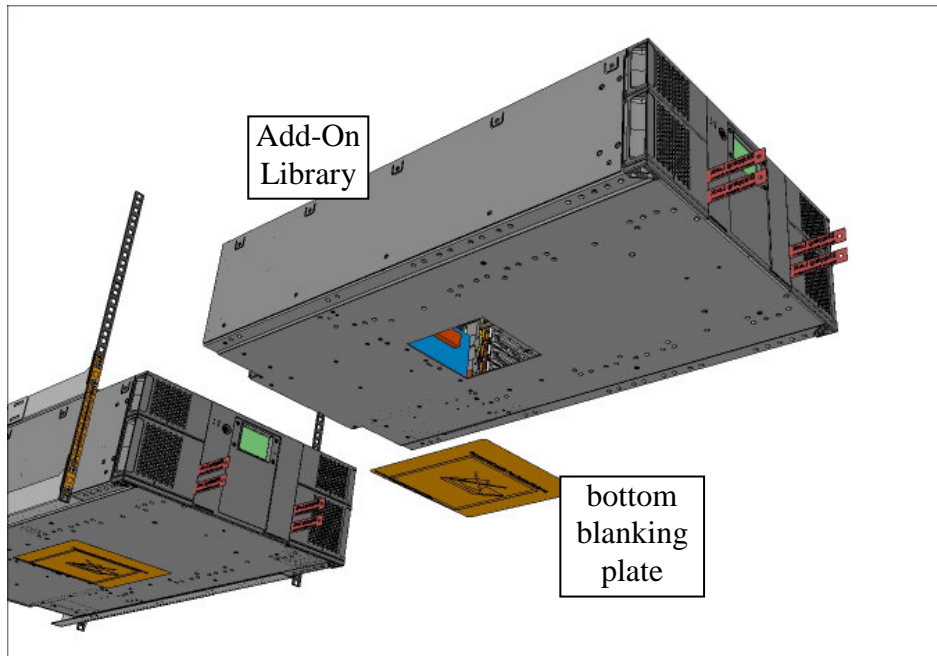

Note

If the unit is in-between two other units, both top and bottom plates are removed.

Figure 11. Slide the units onto the rails, leaving ~100mm for ear mounting.


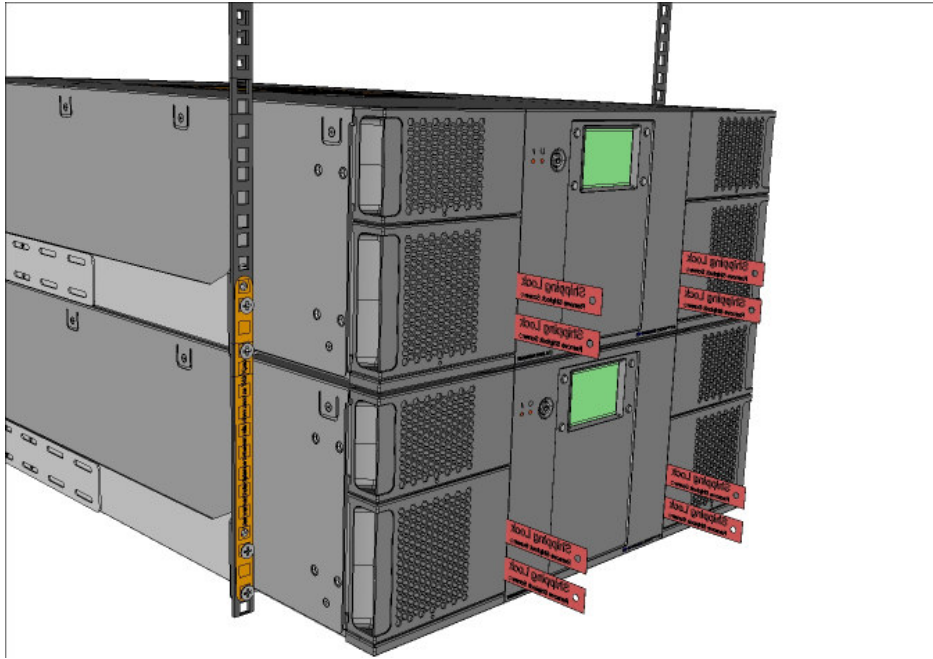


Figure 12. Remove the transport locking screws.

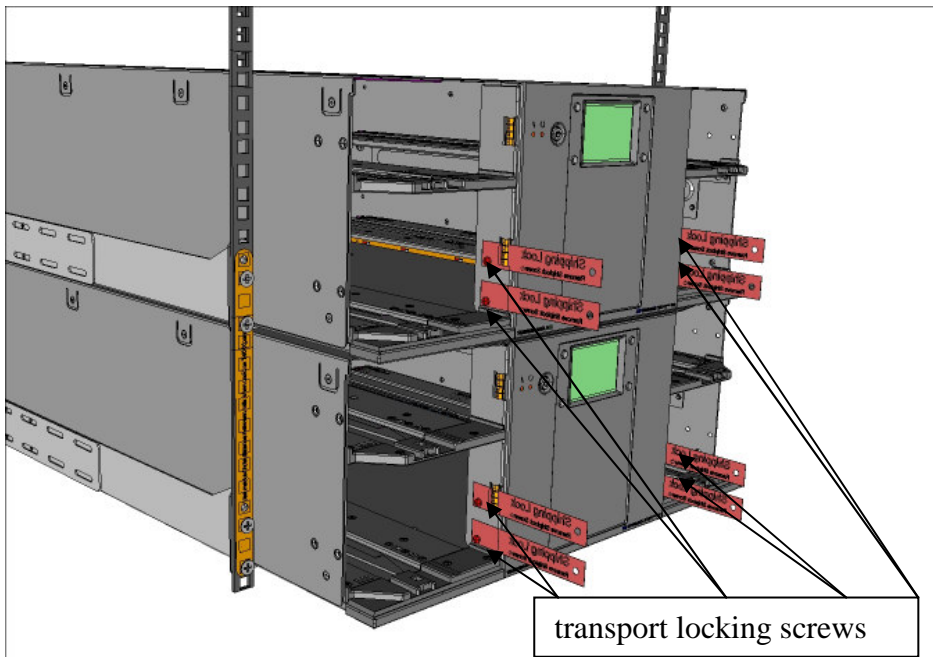

⚠ Caution

The transport locking screws must be removed before the StorageLibrary can operate normally. Be careful not to drop any of the transport locking screws inside the unit.

Figure 13. Mount the ears on the side of the units.

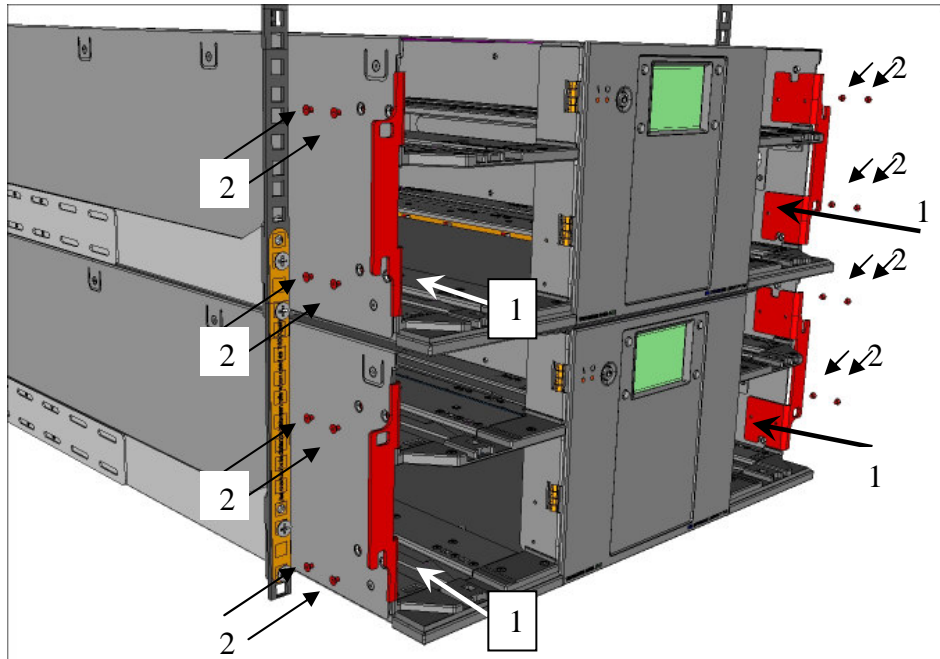


Figure 14. Ear screws mounting sequence.

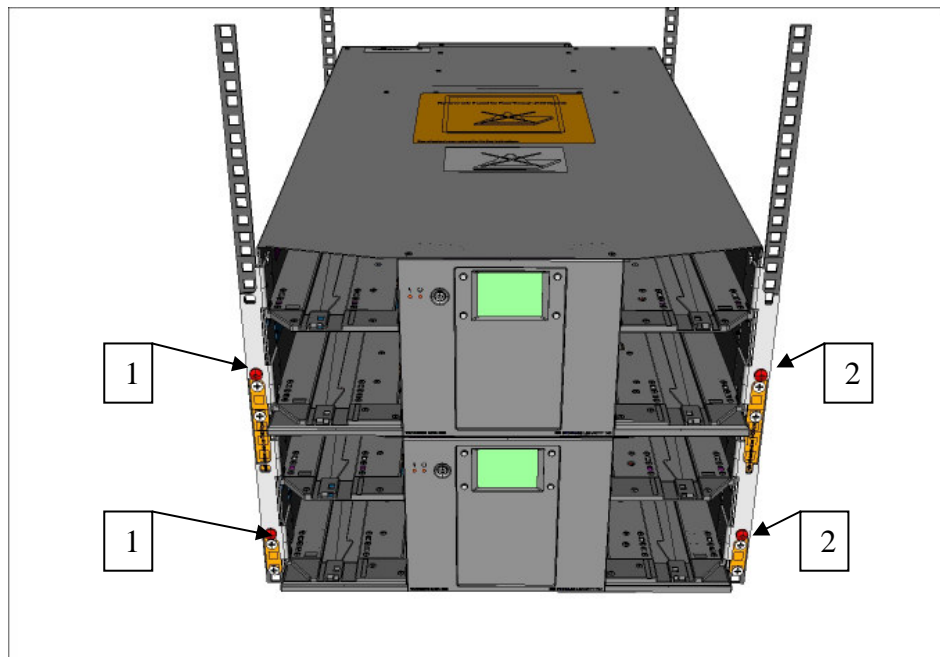


Figure 15. Install the Pass-Thru box in the Pass-Thru magazine.

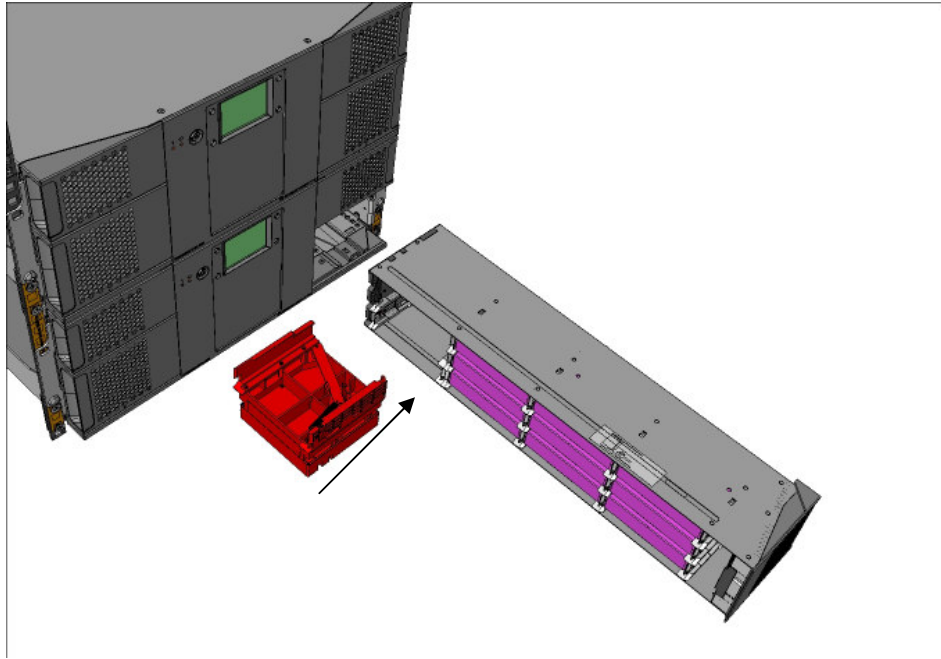


Figure 16. Exchange the right lower-most magazine with the Pass-Thru magazine in all the units except the upper most unit.


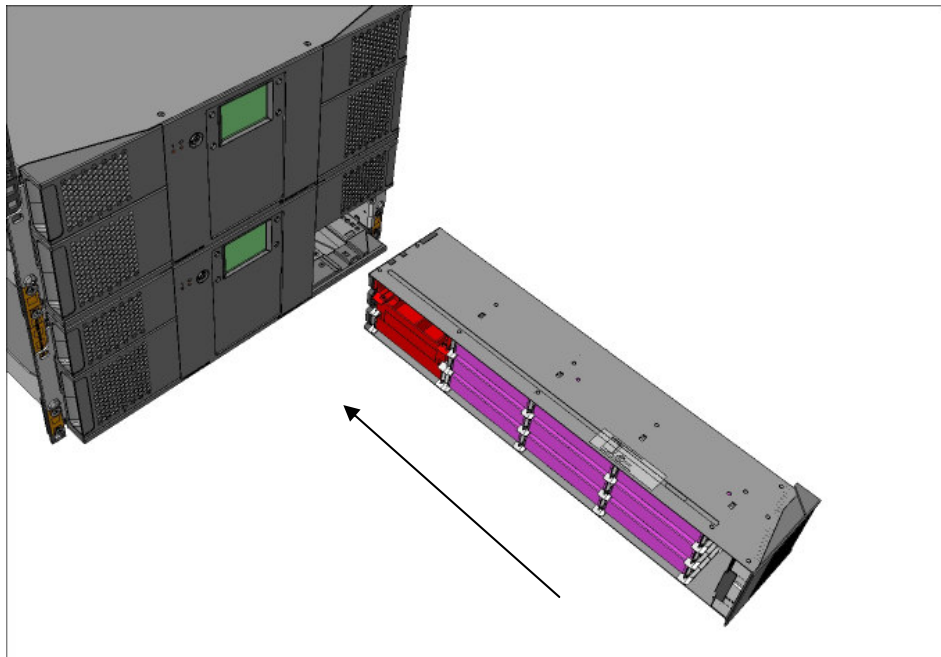


Figure 17. The Complete System.

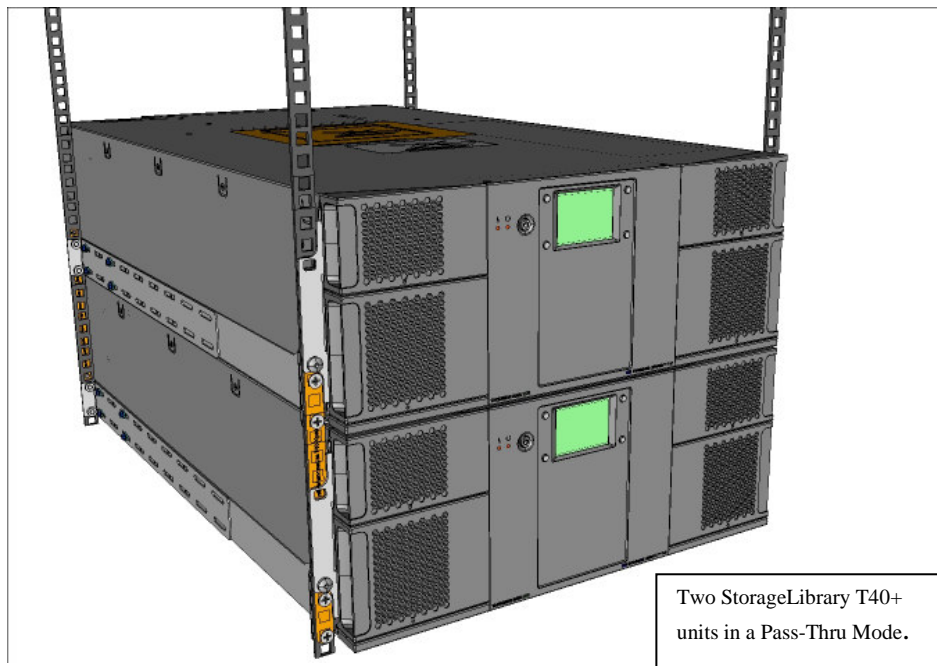

Product Registration and Warranty

Please register your product today at www.tandbergdata.com/register. Registration activates your warranty and entitles you to receive free technical support for products under warranty. Tandberg Data guarantees the highest level of quality and reliability of its products and services.

For latest drivers, firmware, product information or technical support contact information please visit www.tandbergdata.com.